
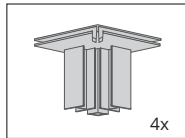
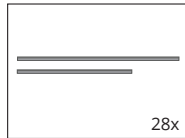





1

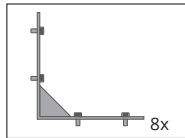


U-FORMATION CARRÉ 80

INSTALLING THE CORNERS

4x



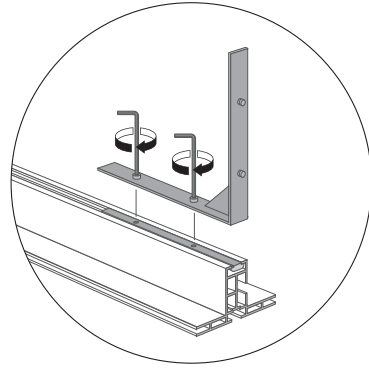
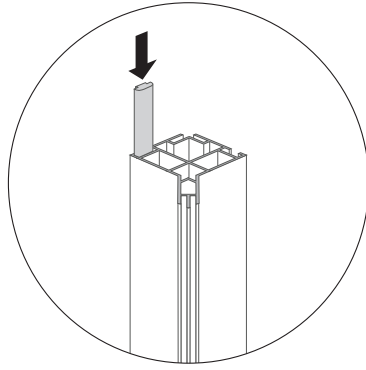
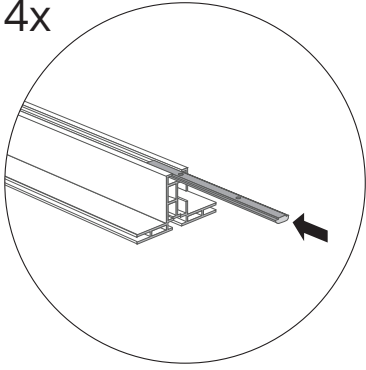


1x

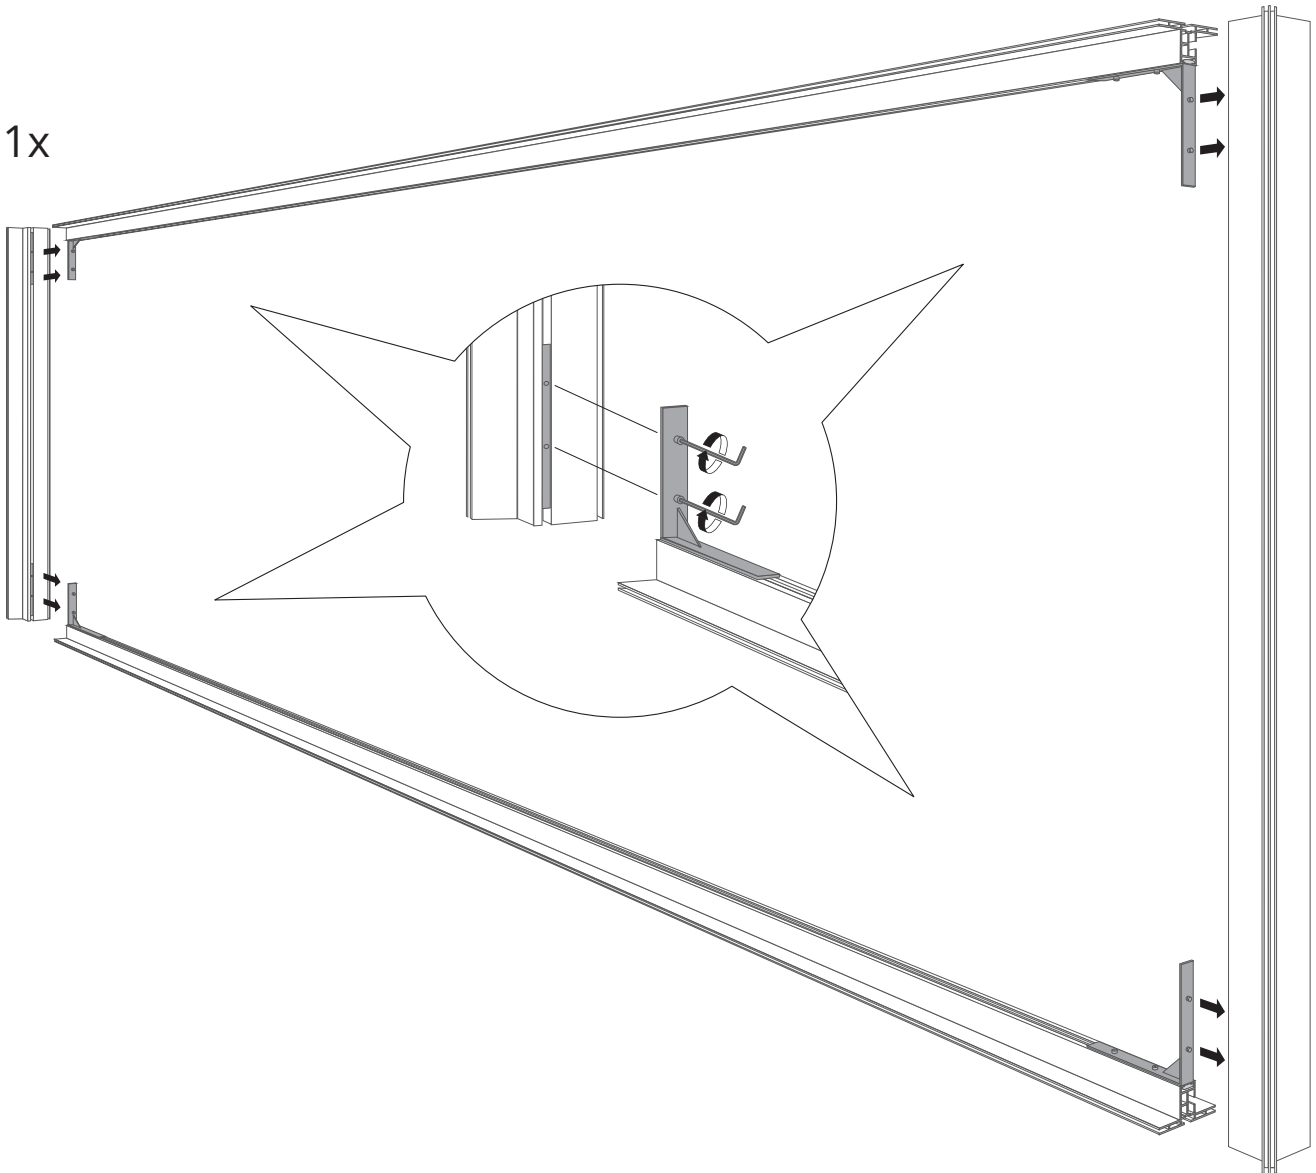


2

4x

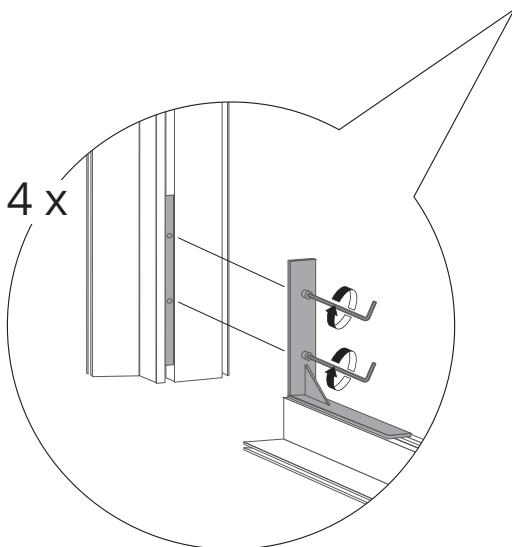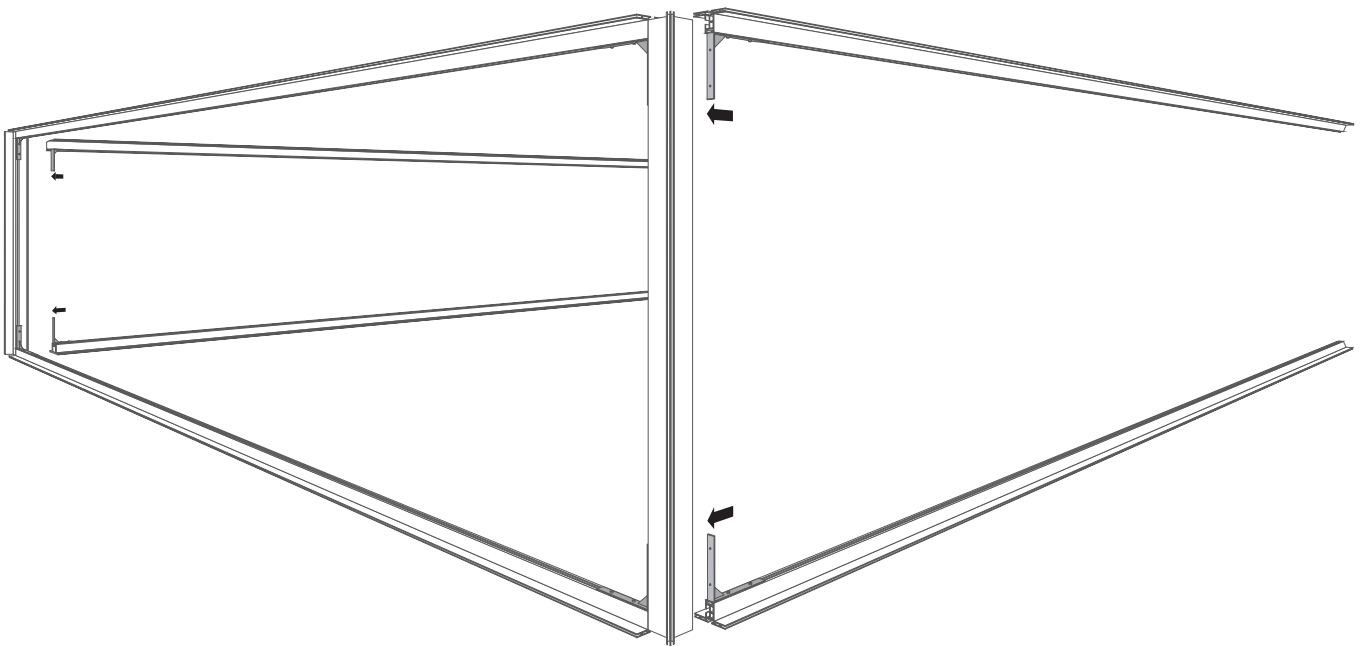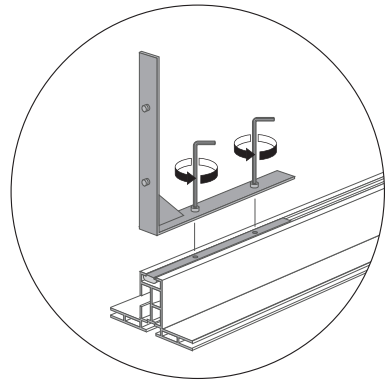
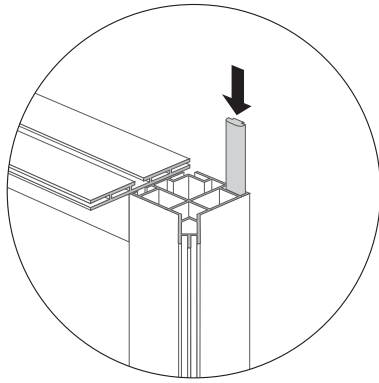
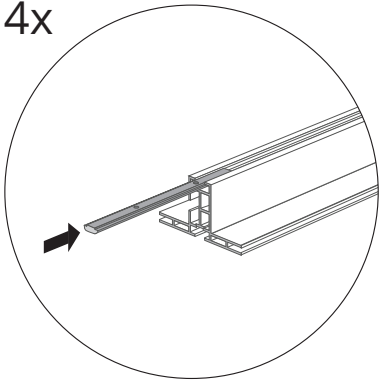


3

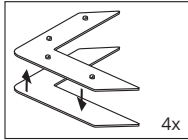


FK-0200





4x

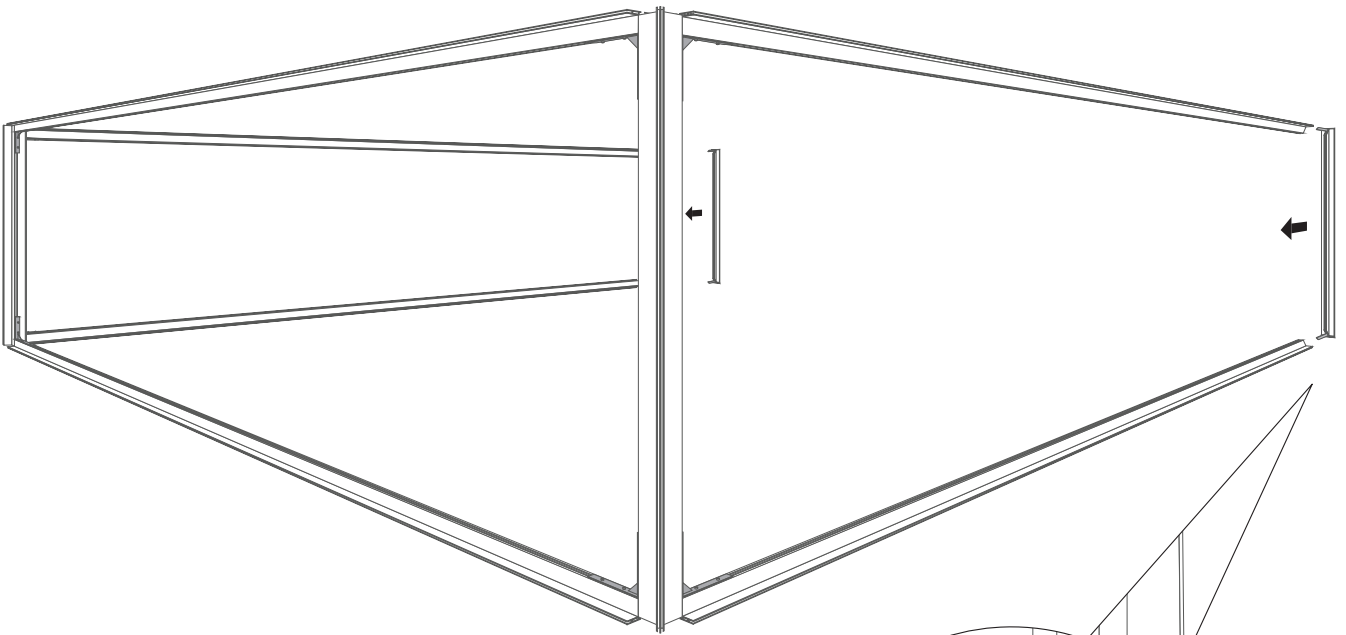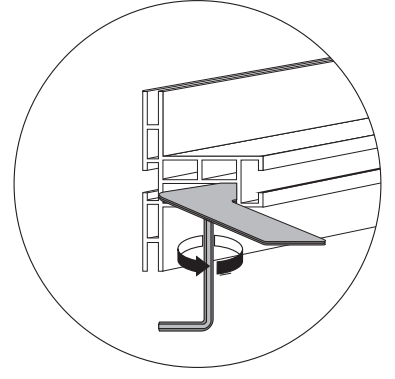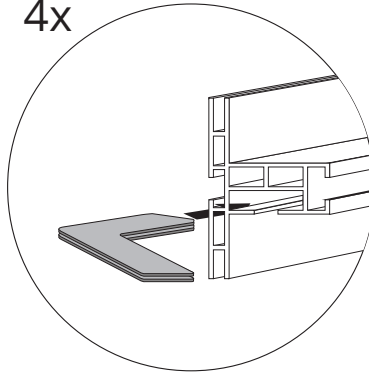


2x

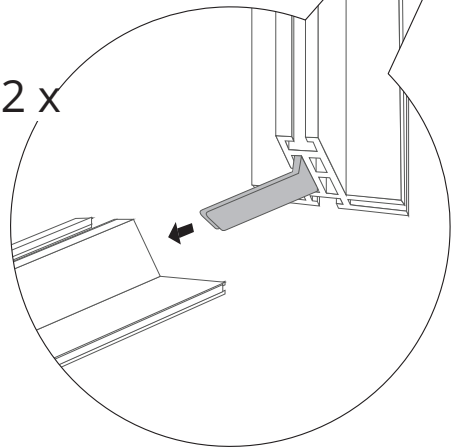


4

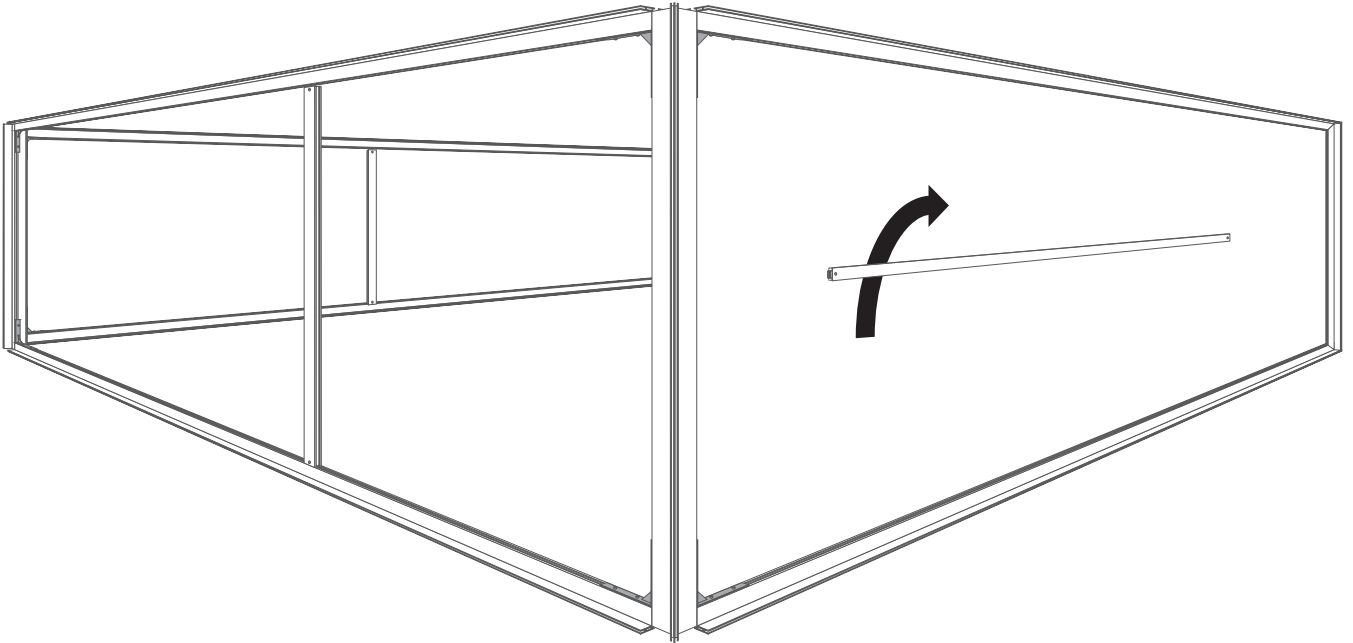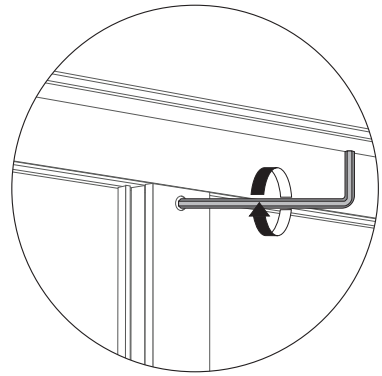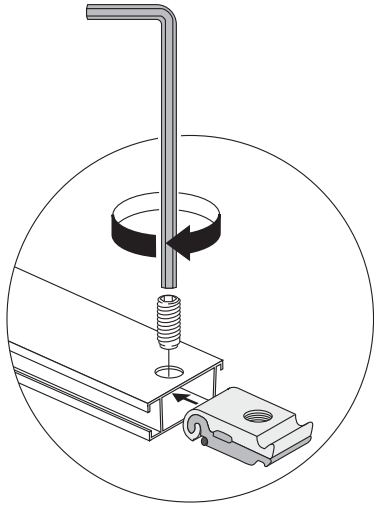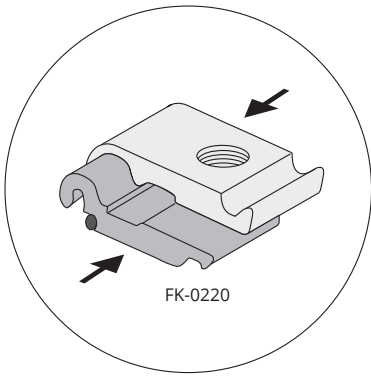


5

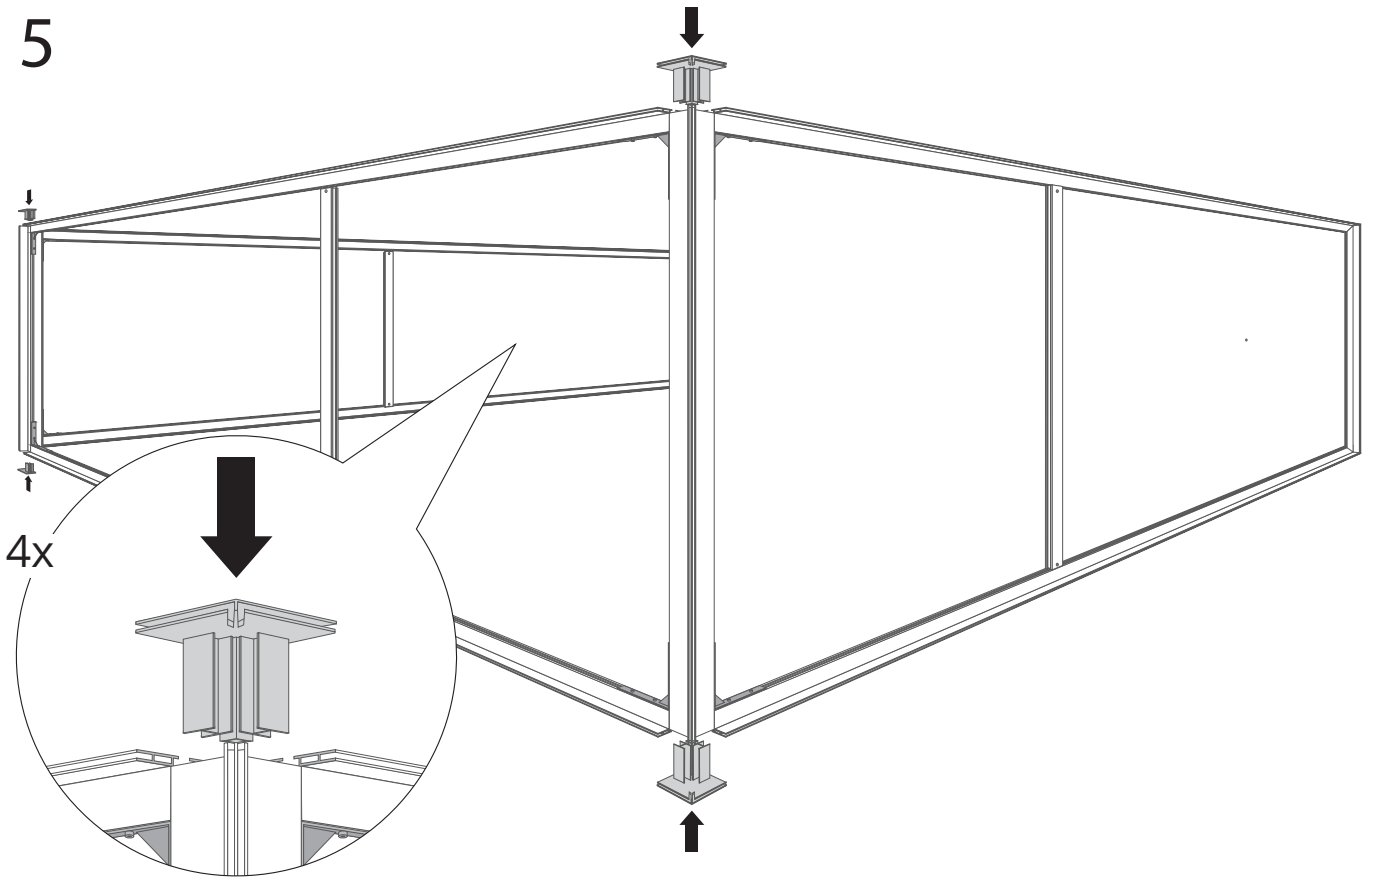


6

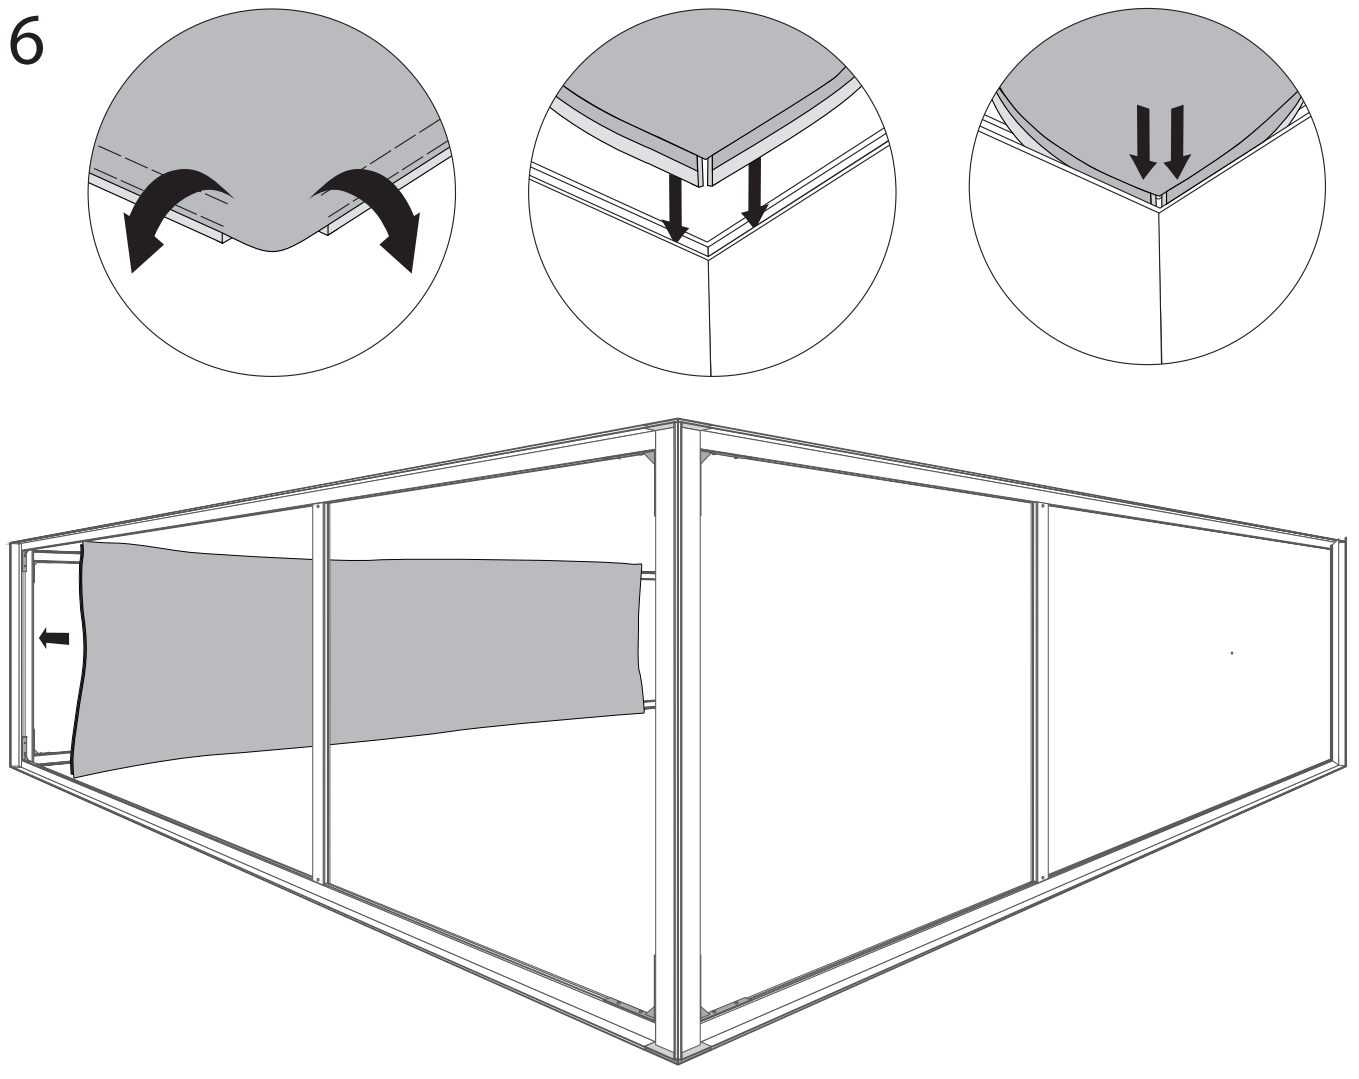


7

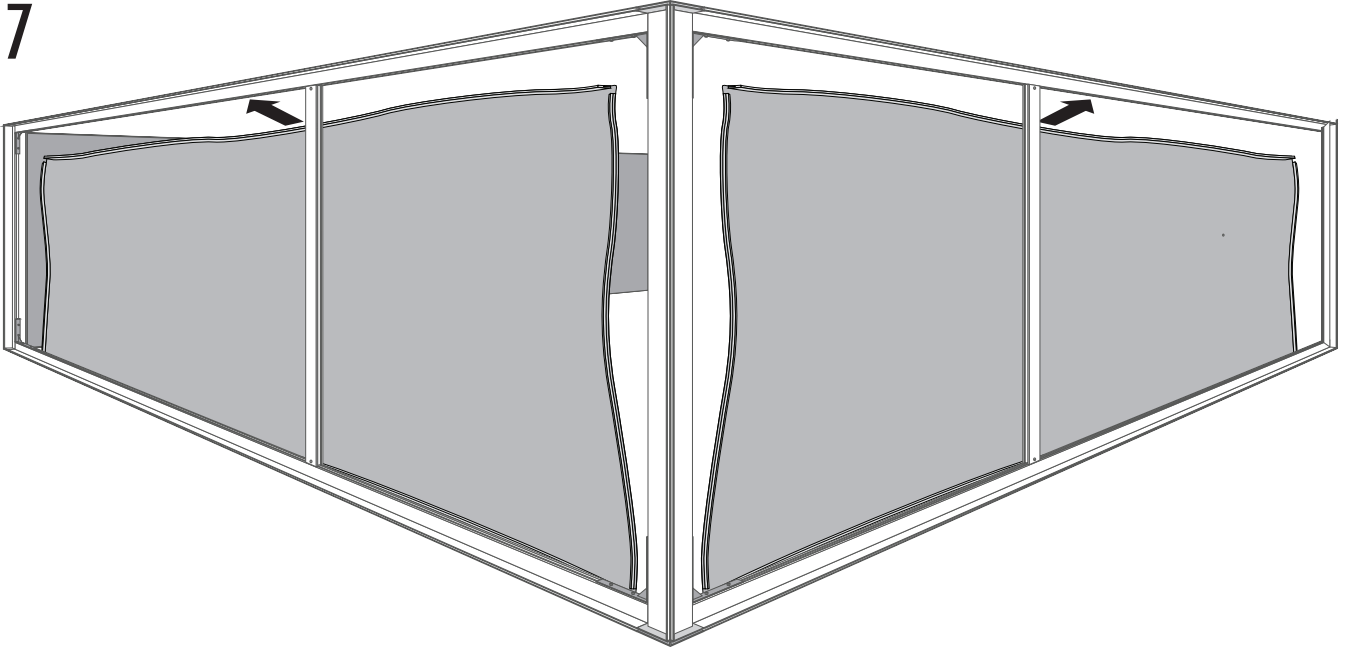

8

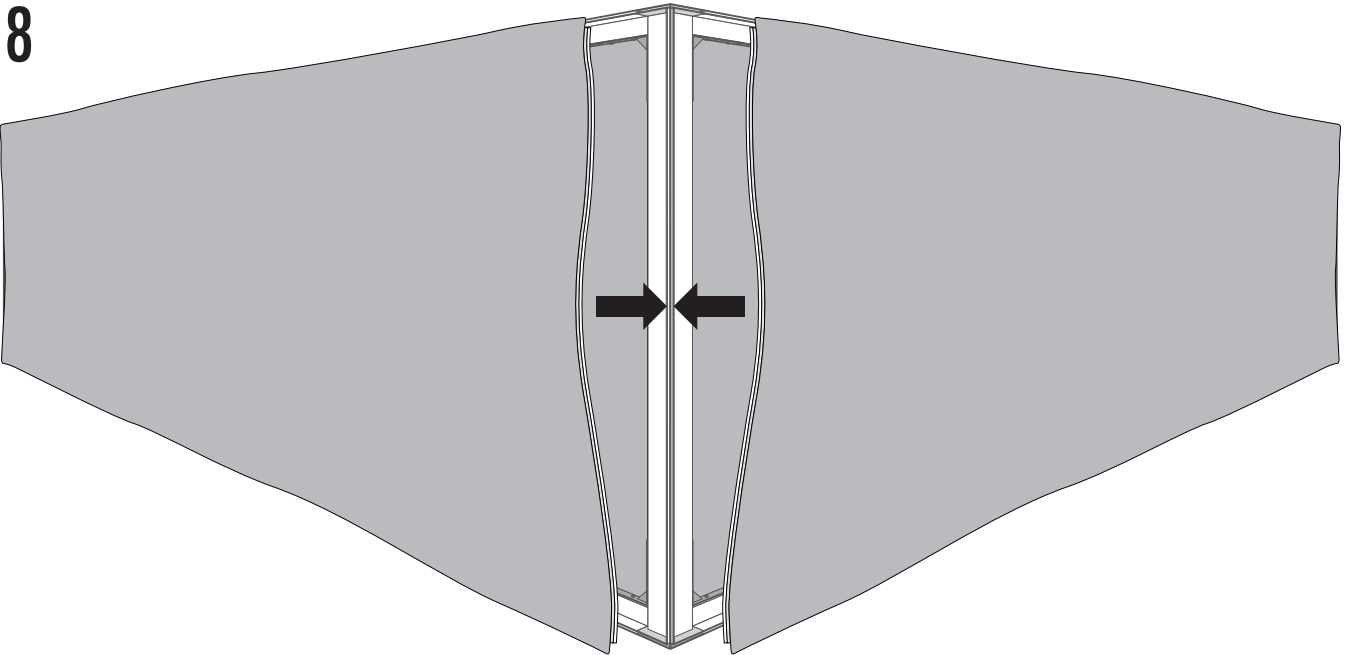

9

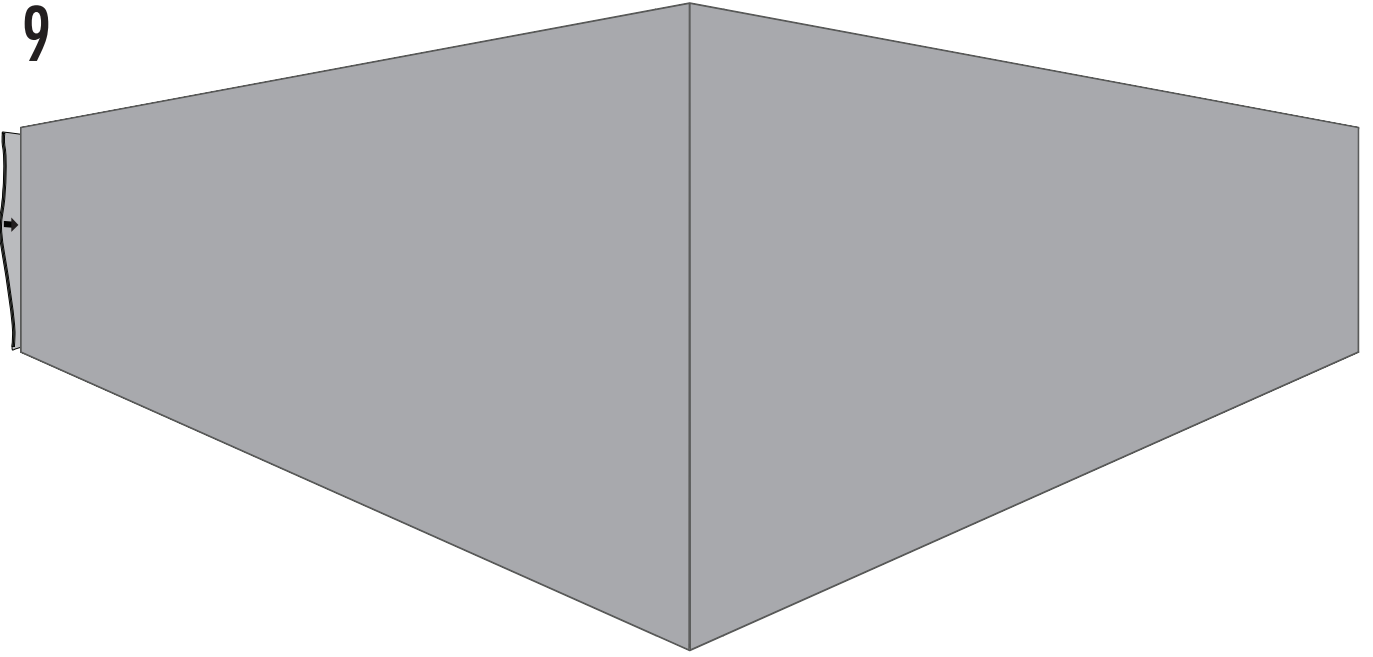

10

